

Items required to build a Phoenix hand

The following items are required in addition to the 3D printed parts. Imperial/US measurements are quoted but metric equivalents should be substituted where appropriate. :

- 3x pan head Phillips sheet metal screws (see sizing table)
- 13x countersink head Phillips wood screws (see sizing table)
- 80-100 lbs strength braided fishing line (see sizing table)
- 10x non-latex heavy grade dental bands (see sizing table)
- 3/8" thick self-adhesive firm foam (use foam cutting templates to determine total length)
- Thick CA glue such as Superglue for sealing the knots in the fishing line
- 5x #3 Lee Tippi gel finger tips
- 2x Velcro straps, 12" long, 1" wide, non-elastic (often sold as cable straps)

Note: The size of the screw holes in the 3D printed parts varies between printers so it's advisable to double check the required screw thickness against your actual printed components to ensure that they are neither too loose nor so tight that they crack the plastic.


Scale	100%	130%	145%	160%
Pan head sheet metal screws	#4 x 5/8"	#6 x 3/4"	#6 x 1"	#6 x 1 1/4"
Countersink head wood screws	#4 x 3/8"	#6 x 1/2"	#8 x 5/8"	#8 x 3/4"
Dental bands	1/4"	5/16"	5/16"	5/16"
Fishing line	65"	85"	95"	104"

Recommended tools for assembly


- Pair of 8" slip joint pliers
- 2 pairs of small long nose pliers
- Small flat file
- Small round file
- Medium half round file
- Small hammer
- Pair of side cutters (for cutting fishing line)
- #2 x 4" Phillips screwdriver
- Medium spring clip (for locking the hinge while stringing the fingers)
- 2 wooden toothpicks (for putting the dental bands on the finger joints)
- 1/8" pin punch (or 3" 10d bright common nail with point ground off)
- Pair of scissors for cutting card template and foam
- #2 pencil for tracing templates onto foam
- 3D printed finger assembly jig (optional but handy for assembly events)




Identify your snap pins

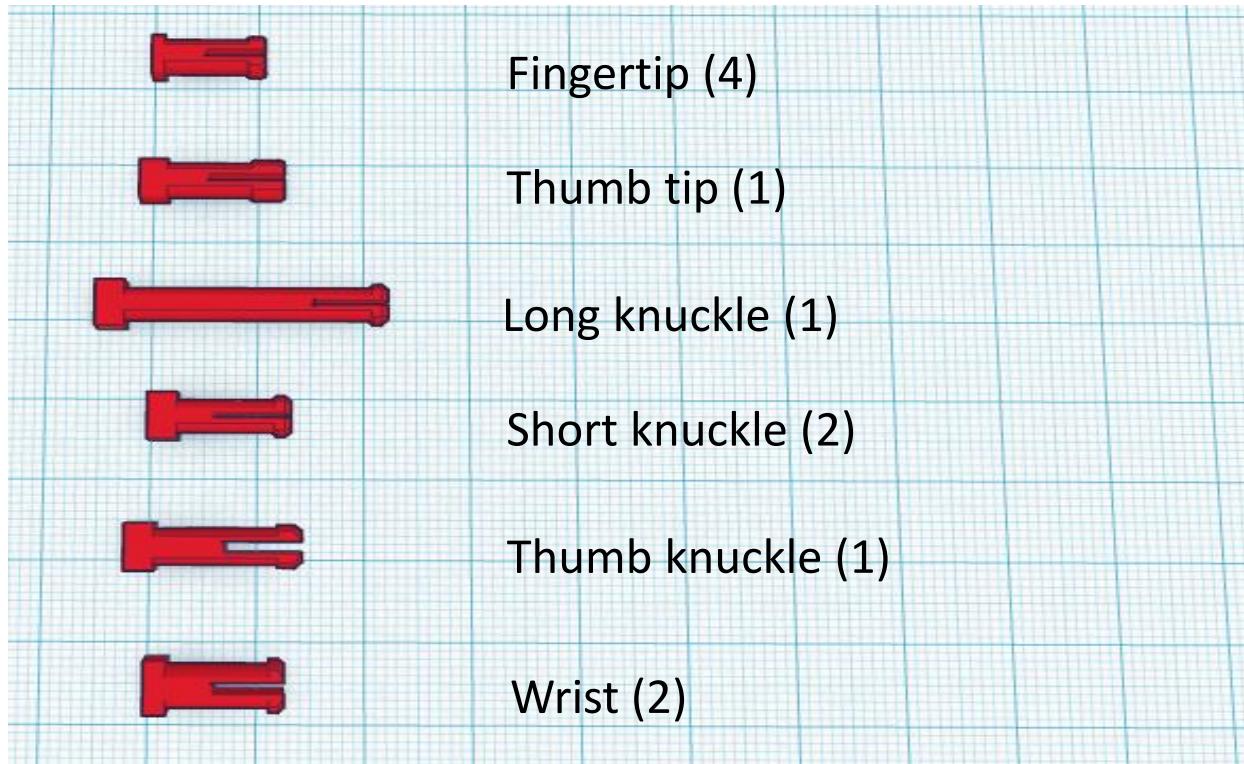

Identify the fingers and thumb

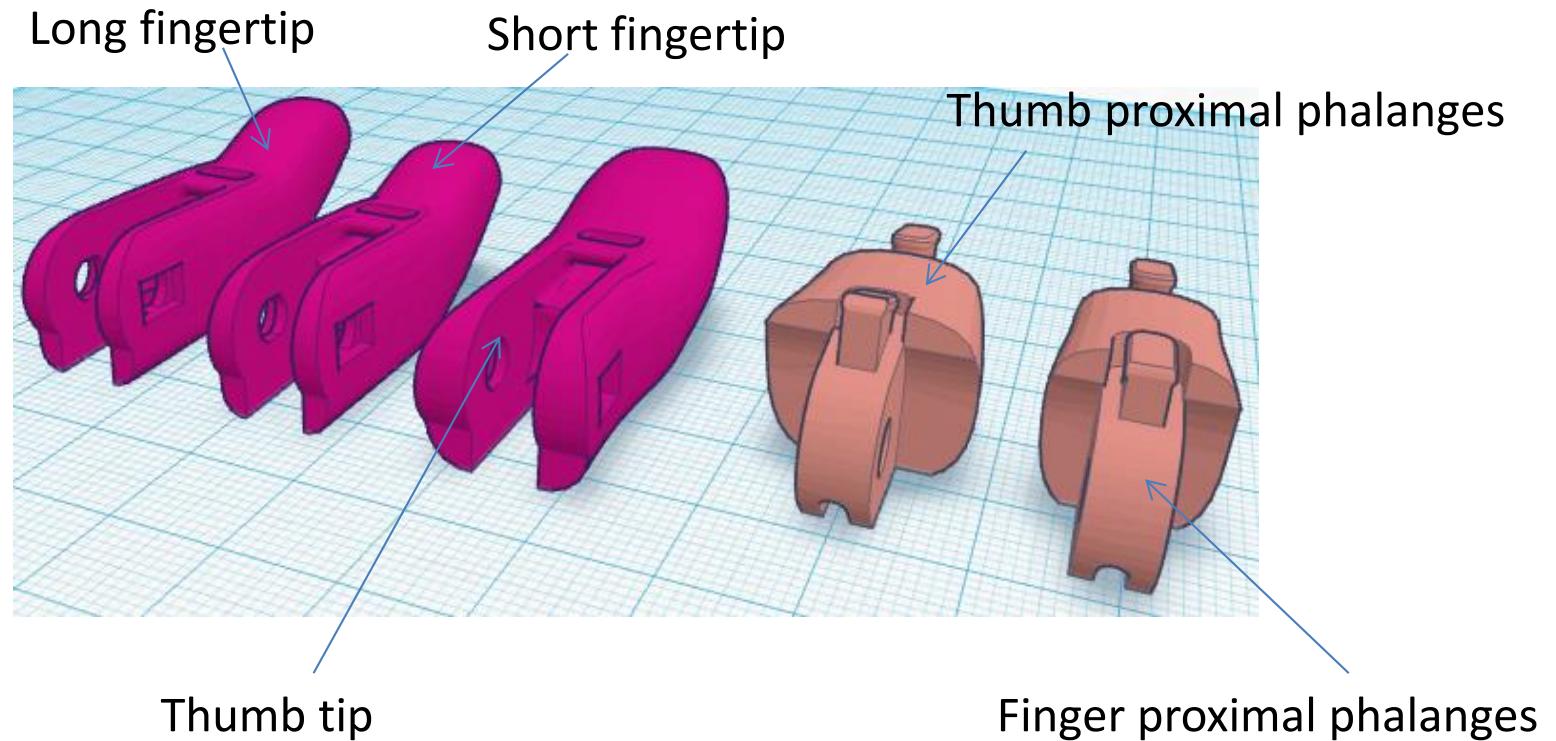


Assemble the thumb

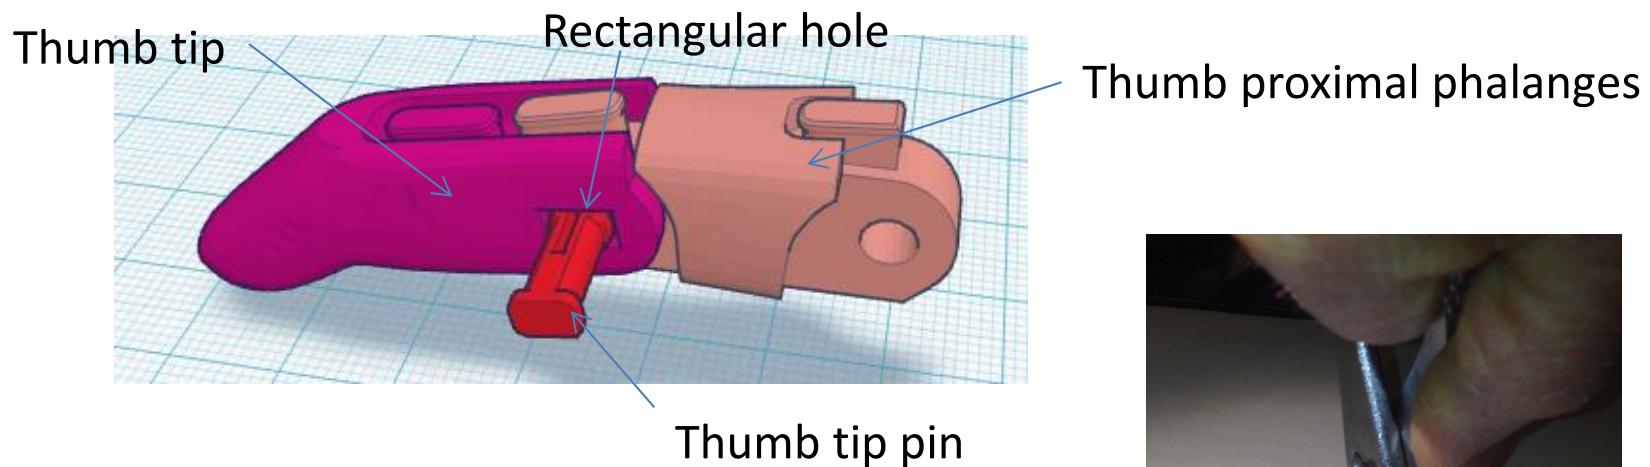

With the rectangular hole on the top align the holes in the thumb tip and thumb proximal phalanges (the wide one).

Hold the thumb tip pin tightly using pliers and push into the hole. Work the joint to and fro till it moves freely.

Assemble the fingers

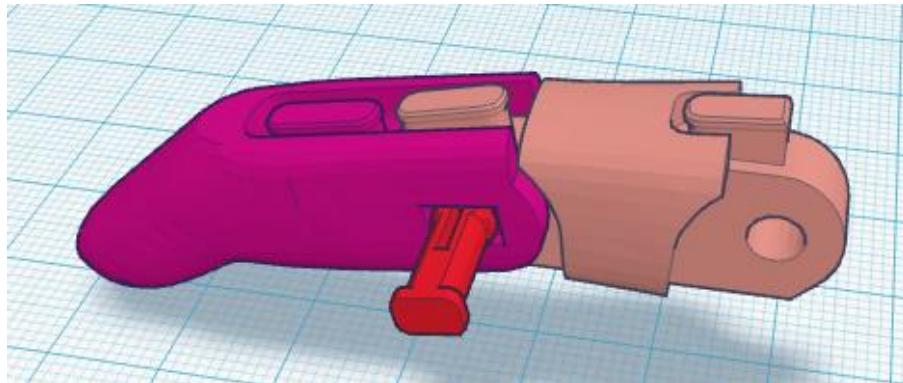


All the finger proximal phalanges are identical.

If the pin is difficult to insert try using a small round file to clean out the round hole at the bottom of the rectangular hole.

Work the joint to and fro till it moves freely.

Identify the locations of the short and long fingers

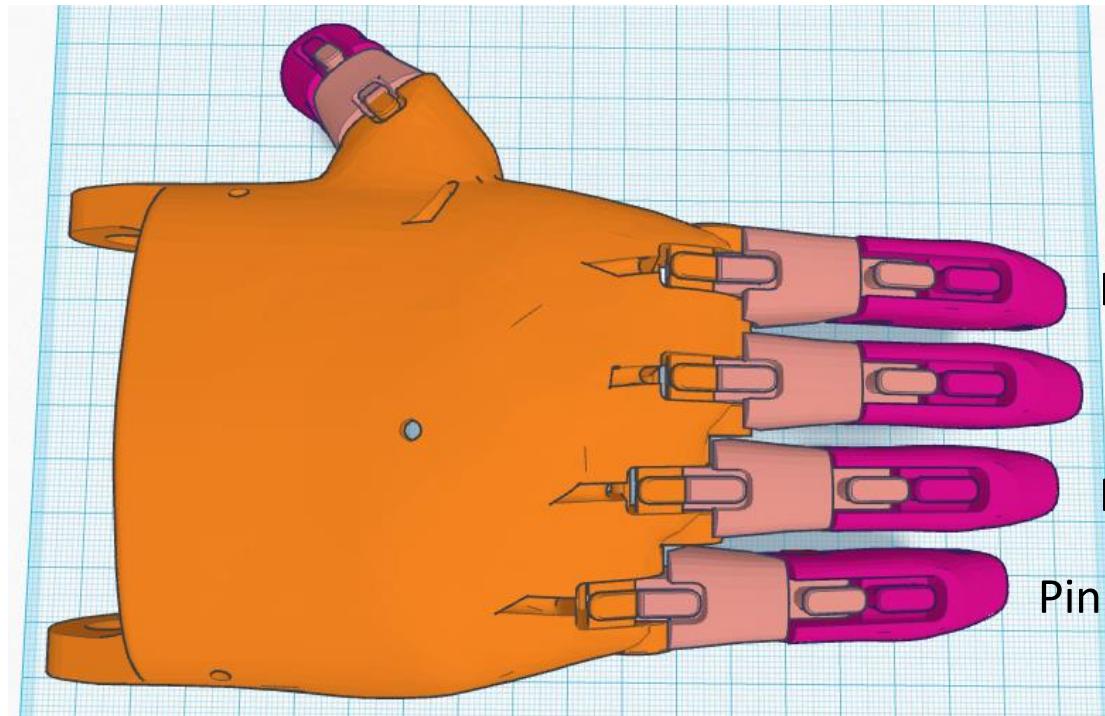


Index - short

Middle - long

Ring - long

Pinkie - short

Attach index finger

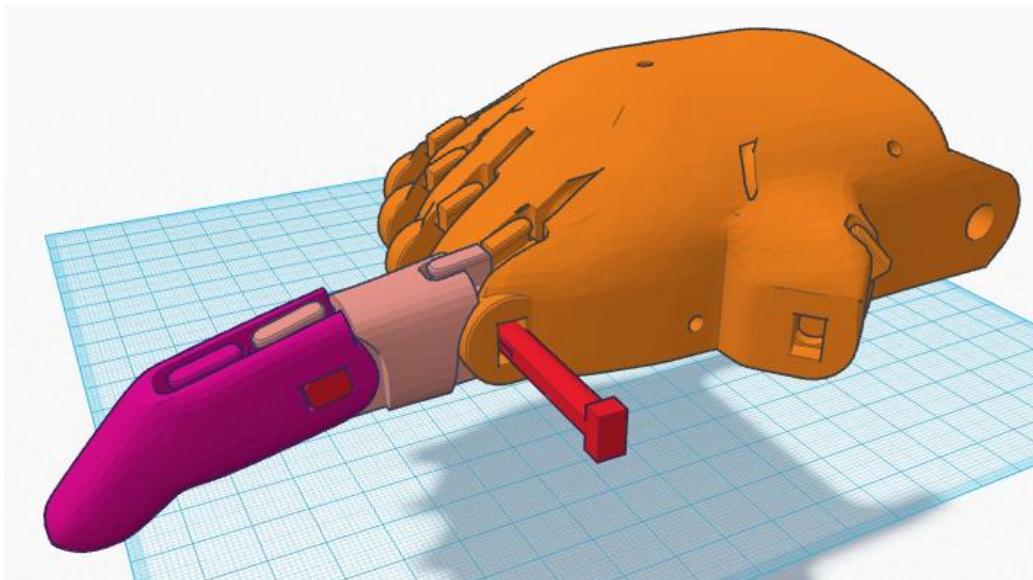


If you can't insert the pin try filing a 45° chamfer on the tip of the pin then try again.

Attach index (short) finger using long knuckle pin.

Before inserting the pin ensure that its rectangular head will fit in the rectangular hole in the palm. If necessary file or sand the pin head to fit.


Using pliers firmly grip the rectangular end of the long knuckle pin. Push pin through till it almost appears in the joint slot for the middle finger. Alternatively, hold the pin with long nose pliers and gently tap the head of the pin using a hammer.

Attach middle finger

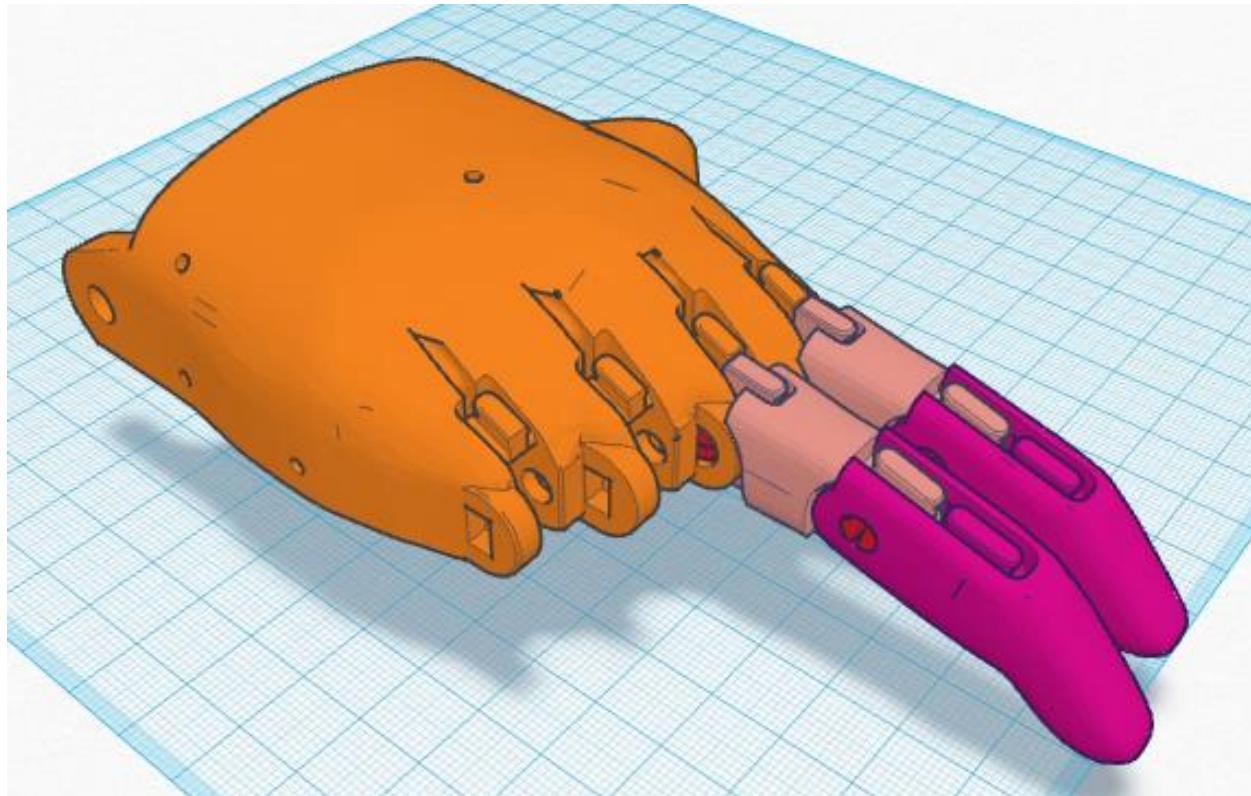

Insert middle finger into its joint slot and press the long knuckle pin in completely using the pliers. You may need to use a few light taps from a hammer to finish pushing in the pin but be very careful not to damage the outside palm joint for the pinkie.

Attach ring finger

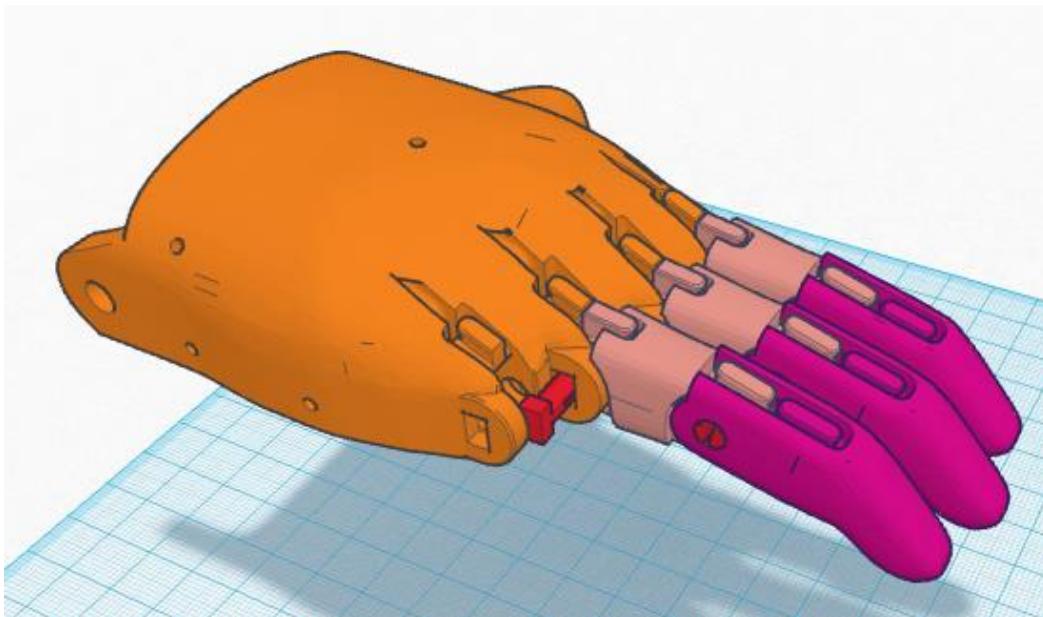


Before inserting one of the short knuckle pins ensure that its rectangular head will fit in the rectangular ring finger hole in the palm. If necessary file or sand the pin head to fit.

Press the pin into the rectangular hole for the ring finger using the pliers. Once the tip of the pin is in place insert the ring finger (long) into its joint slot then push the pin in fully. You may need to use a nail punch and hammer to complete this step.




Attach the pinkie finger

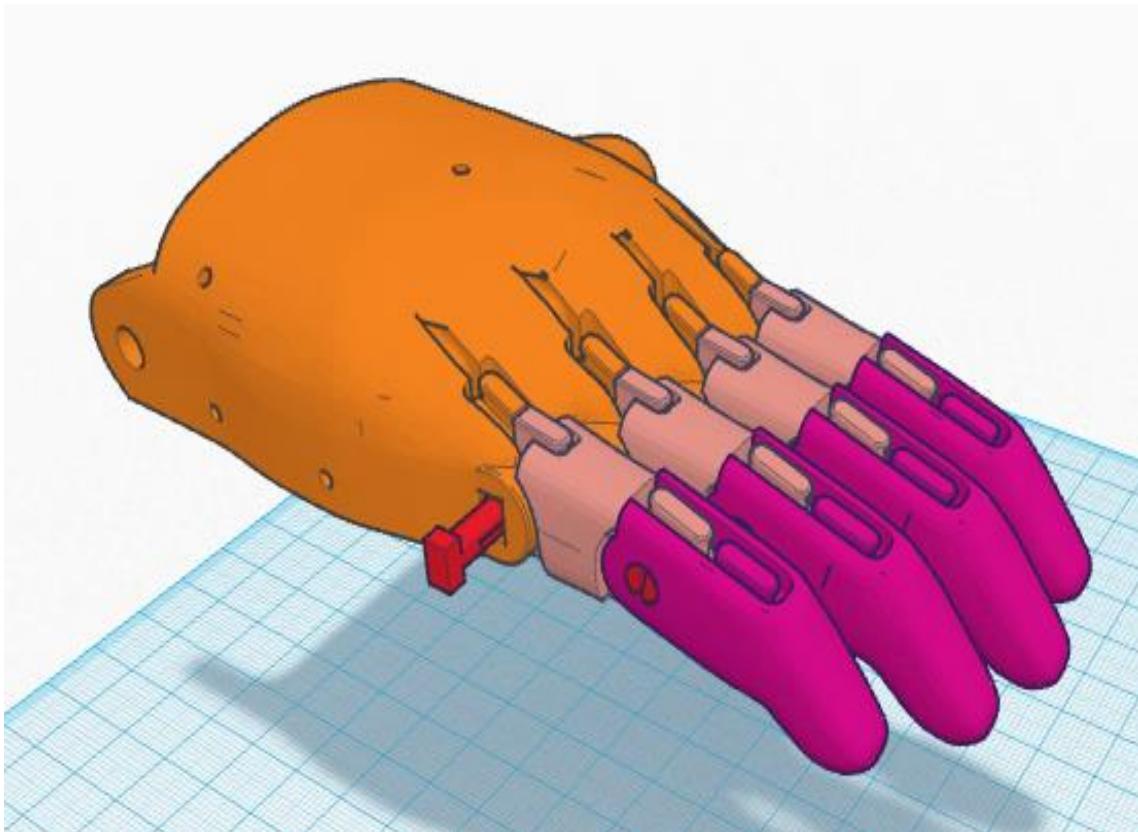

Before inserting the other short knuckle pin ensure that its rectangular head will fit in the rectangular pinkie finger hole in the palm. If necessary file or sand the pin head to fit.

Press the pin into the rectangular hole for the pinkie finger using the pliers. Once the tip of the pin is in place insert the pinkie finger (short) into its joint slot then push the pin in fully. You may need to use a hammer to finish this step.


Attach the thumb

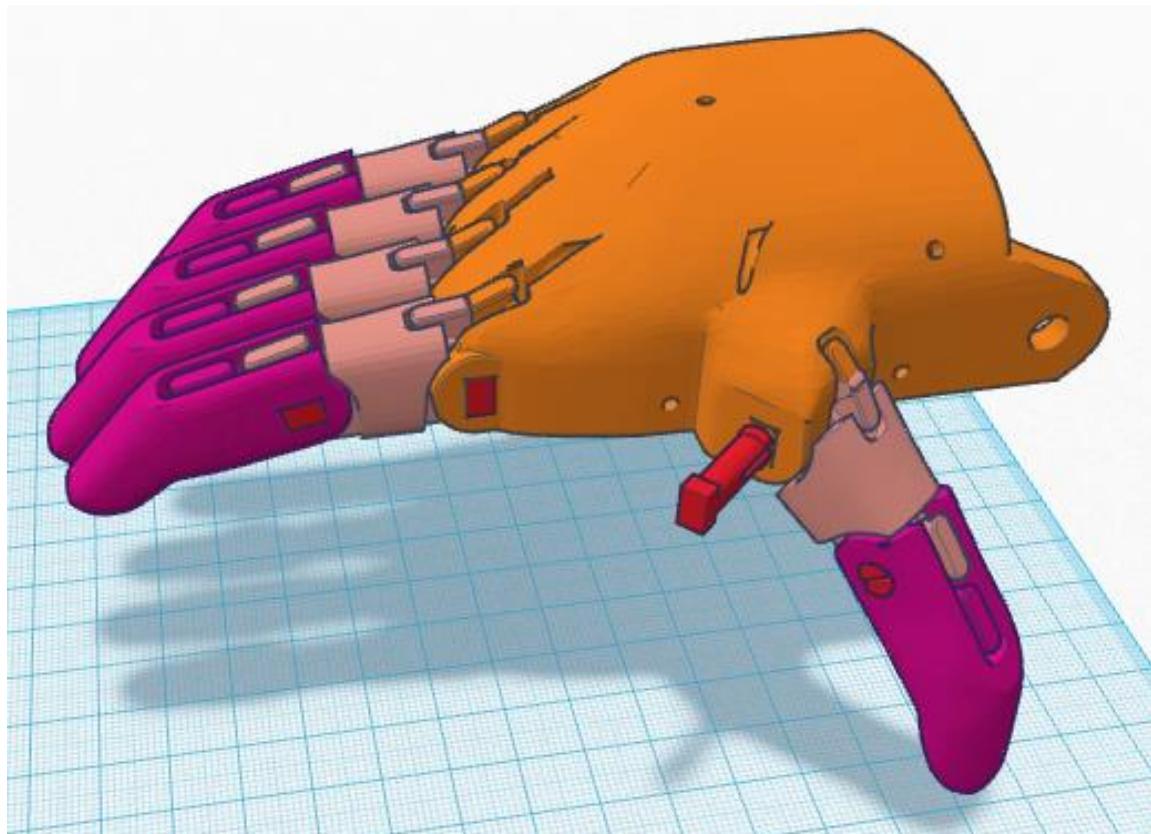

insert the thumb into its joint slot then push the thumb knuckle pin in fully. This can usually be done using just the pliers.

Make sure the thumb moves freely in the knuckle joint. If it can't be made to swing freely by working it to and fro you'll need to remove the thumb, file the curved surface of the pin using a small flat file then reattach.


Attach the wrist pins to the gauntlet

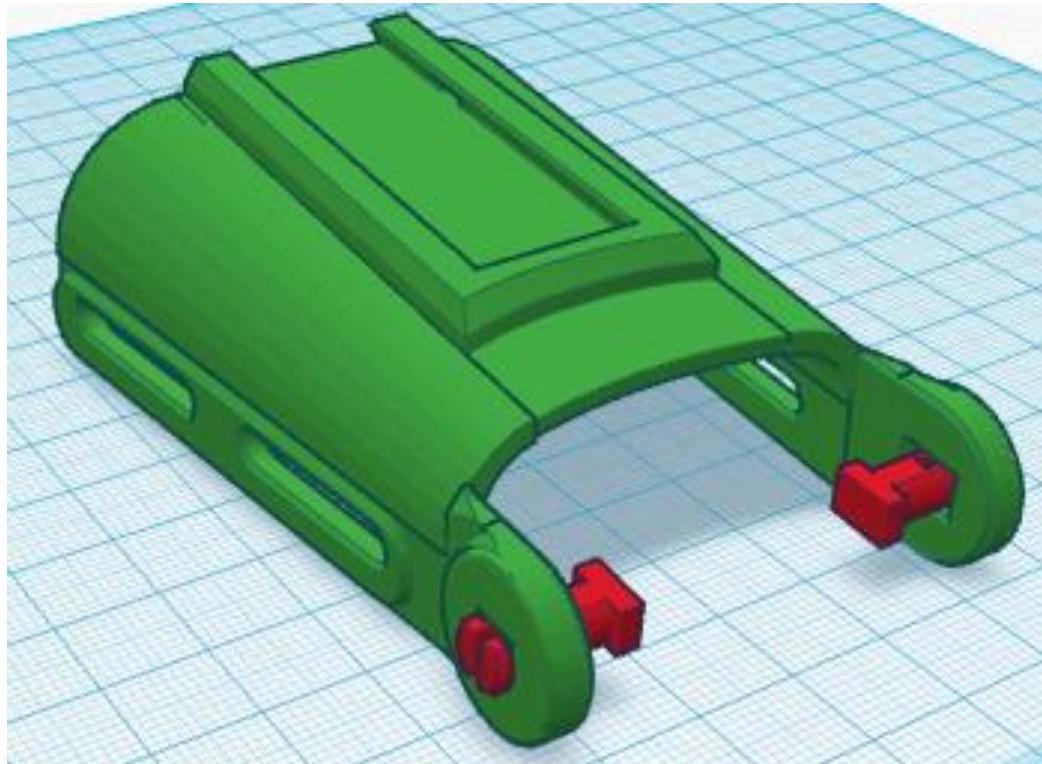

Press the wrist pins into the rectangular holes in the gauntlet hinge. The pins need only protrude a short distance ... don't push them all the way in.


Note that the actual gauntlet used will look slightly different to the picture as it is printed flat then thermoformed (bent under heat) using hot water.

Attach the gauntlet to the palm

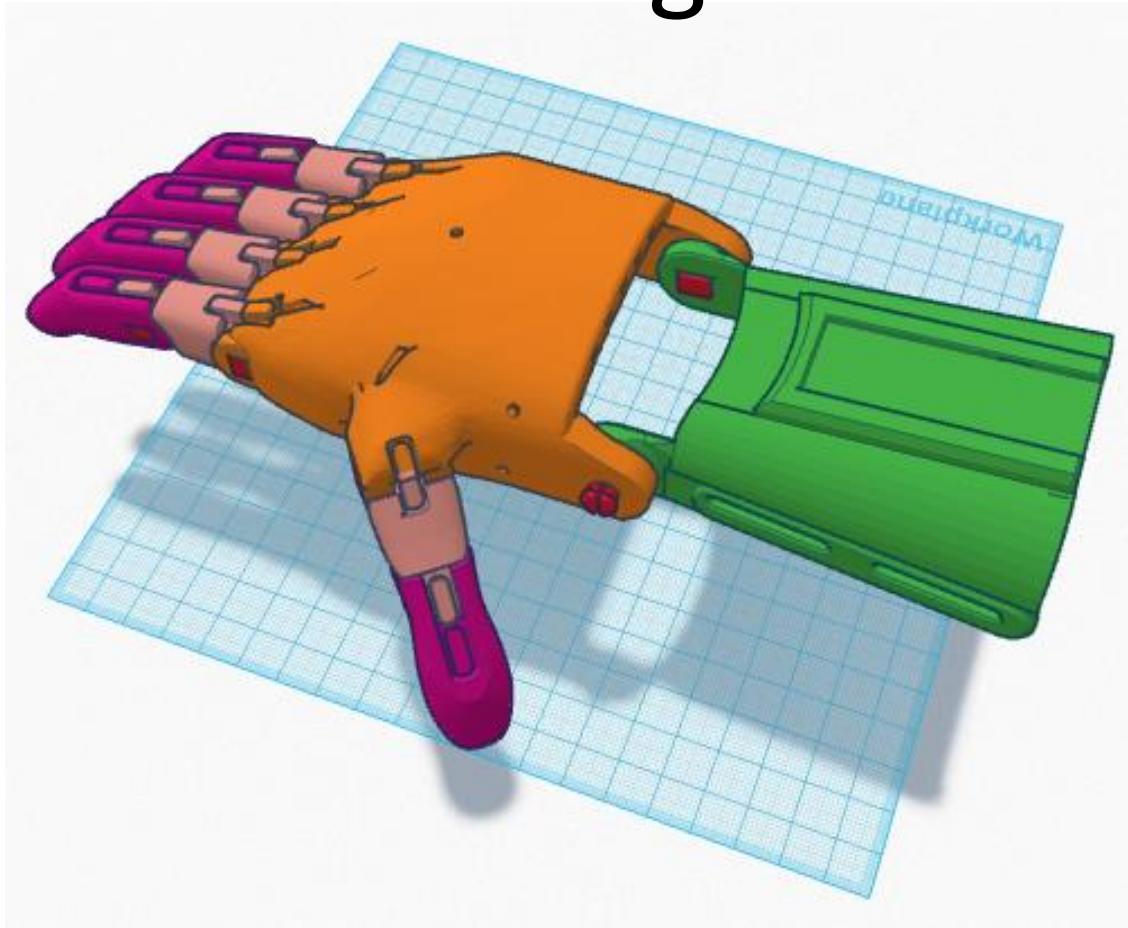


Slightly squeeze the gauntlet hinges together and locate the wrist pins in the corresponding holes in the palm. Press the wrist pins into place. You may need to use the pliers for this step.

Attach the wrist pin caps

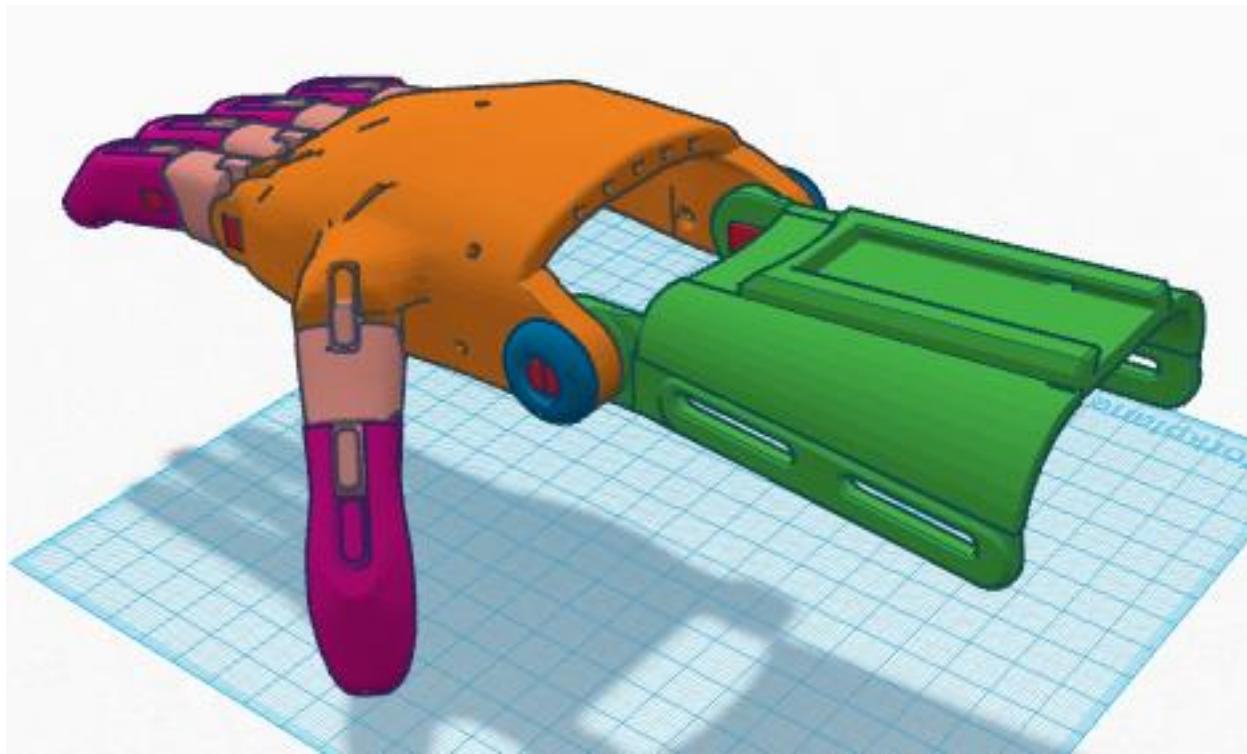


Snap the wrist pin caps onto the ends of the wrist pins. You may need to squeeze the cap onto the pin using the pliers on their wide jaw setting.

Attach the gripper box to the gauntlet

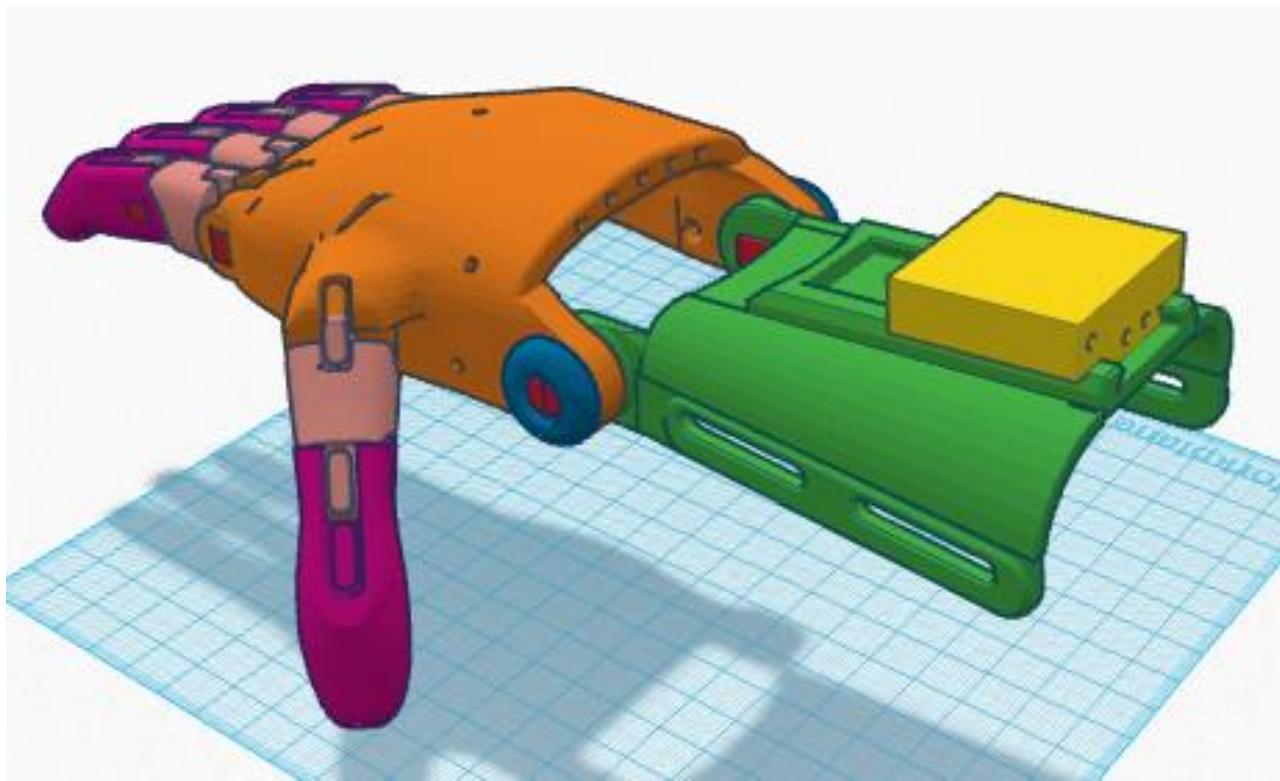


Push the gripper box into the dovetail slot on the back of the gauntlet but only push it far enough for the back of the gripper box to be fully in the slot. This is to allow the components to be fitted inside in a subsequent step.

Attach the dental bands


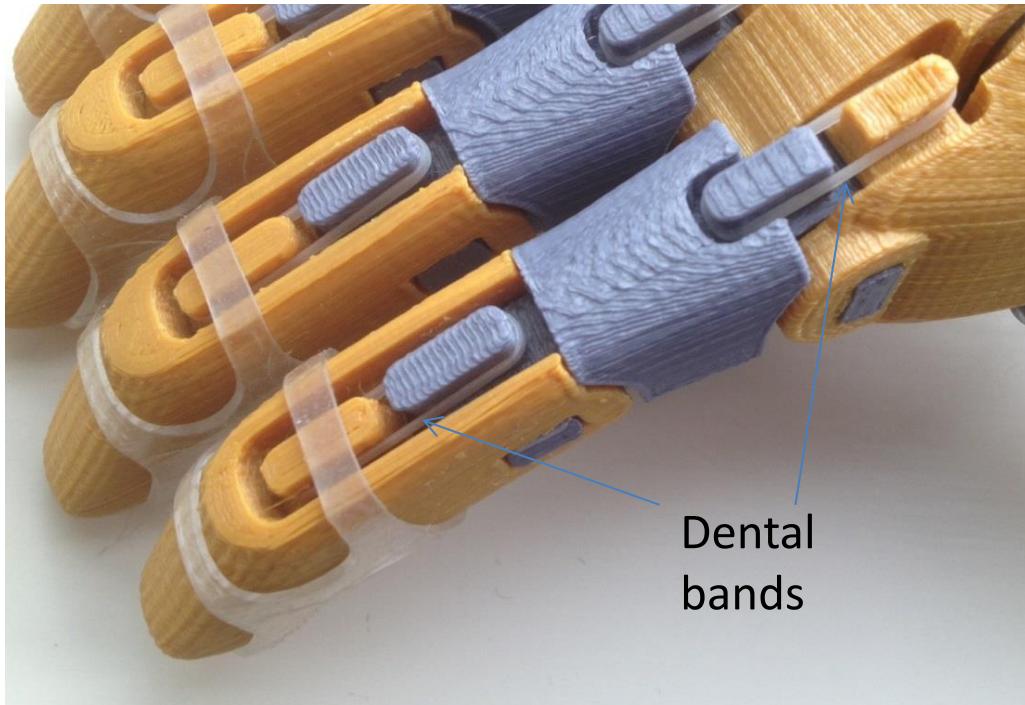


Using a thin pointed tool such as a toothpick attach dental bands to each of the the ten finger and thumb joints. The bands will pull the fingers and thumb into their straight unclenched position.

Stringing the fingers

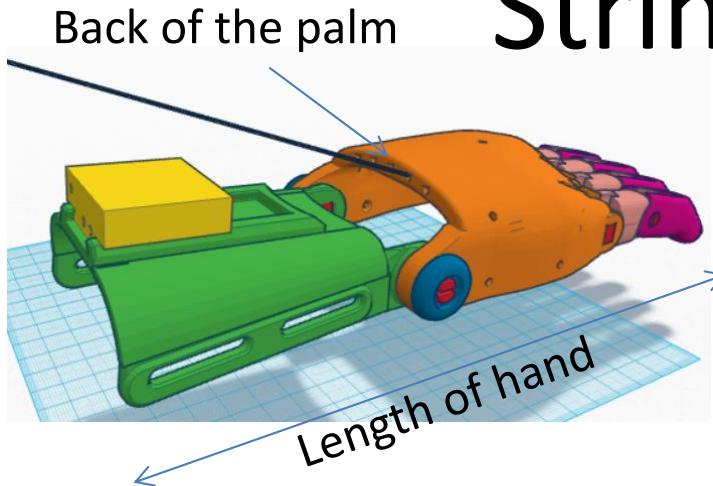


Hole behind
the joint

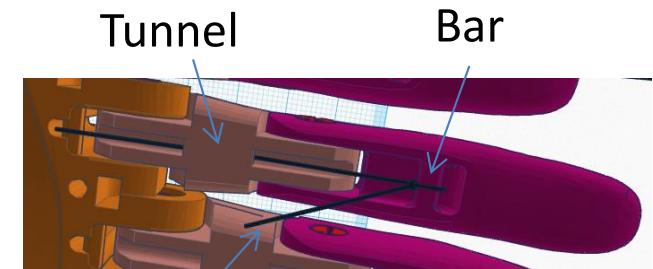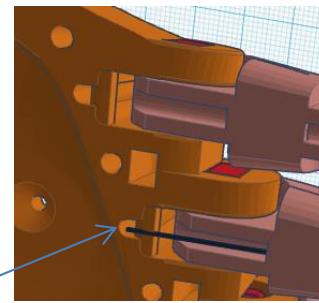

Cut a length of fishing line that is three times the length of the hand. Thread it through the fourth hole from the thumb side on the back of the palm till it comes out the top of the palm near the ring finger knuckle. Thread it down the back of the knuckle joint so that it appears through the hole behind the joint on the bottom of the palm. Thread it through the tunnel in the bottom of the proximal phalanges then under the bar across the bottom of the fingertip. Tie it tightly around the bar using a triple knot. Use two pairs of small long nose plier to ensure the knot is tight. Cut off the remaining thread from the knot leaving about an inch remaining.


Stringing the fingers – part 2

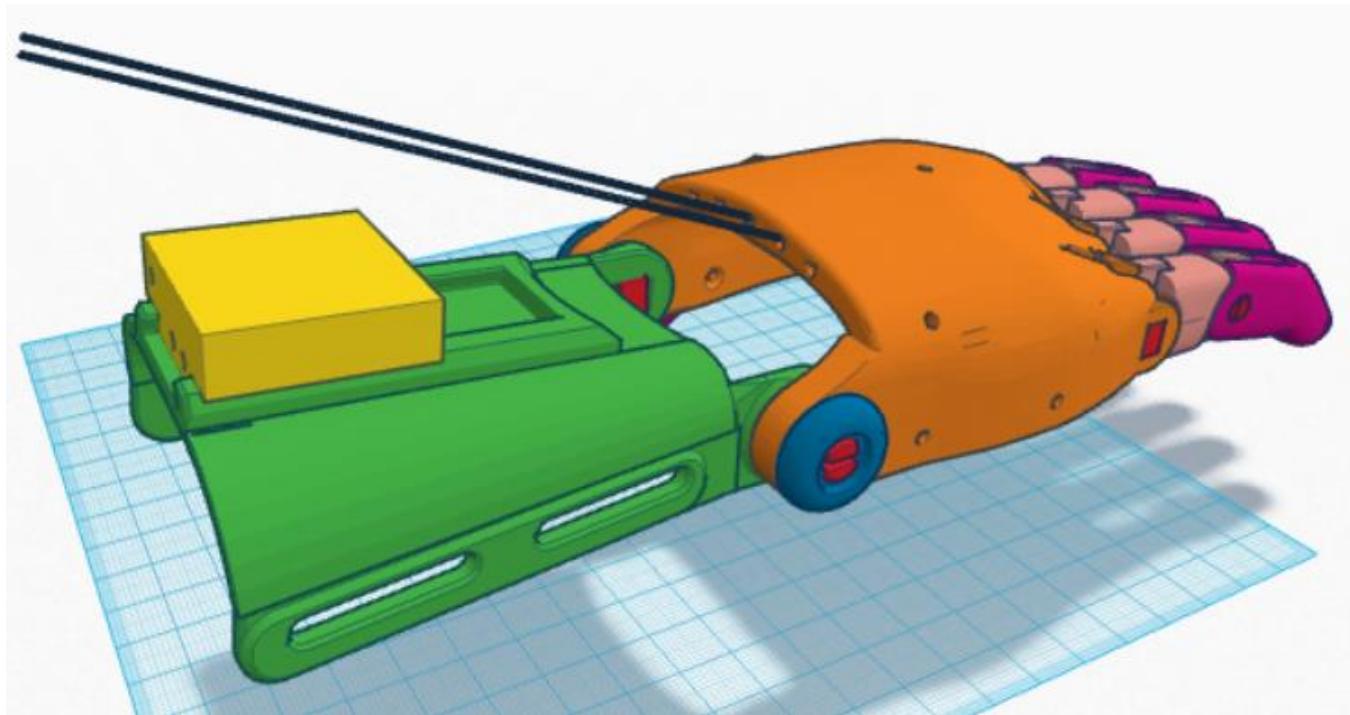

Cut another similar length of thread and repeat the operation using the middle hole in the back of the palm. Tie a knot on the bar under the middle finger.




Stringing the whippetree

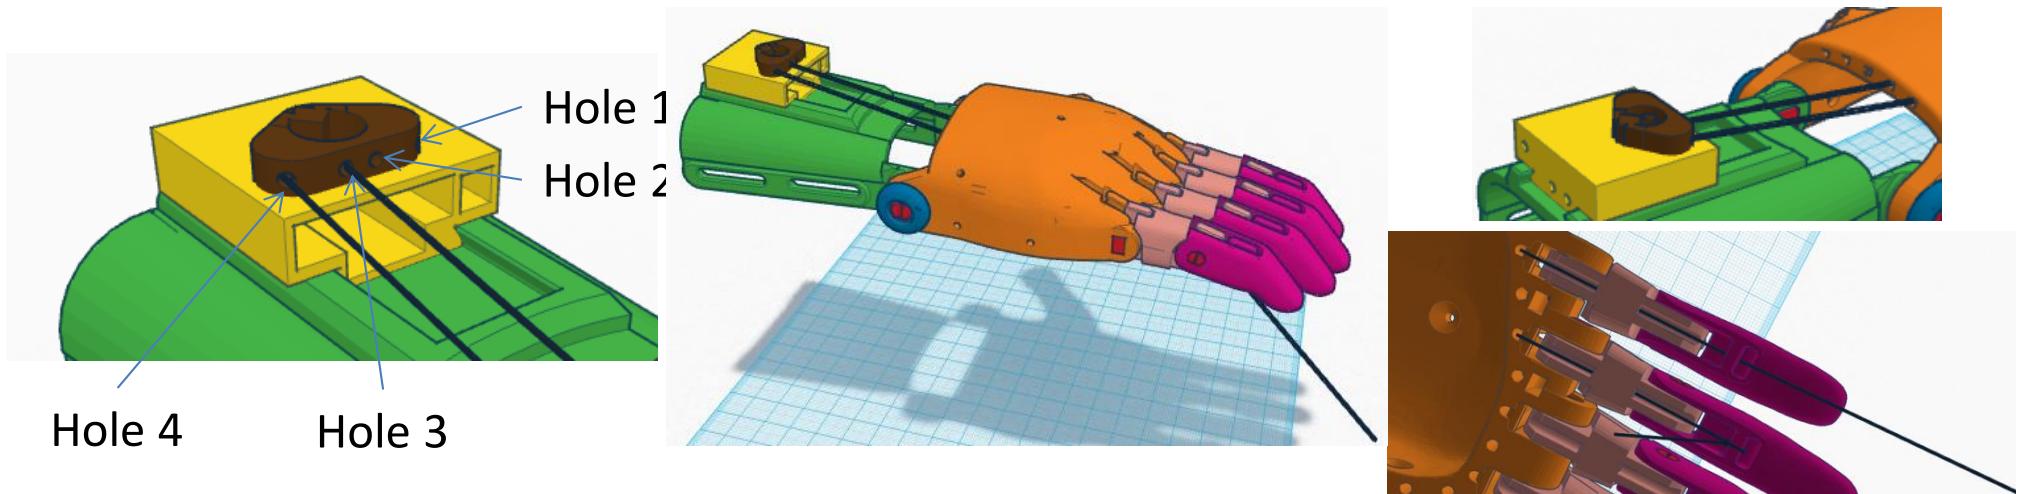



Place the whippetree on the back of the gripper box with the four holes facing the palm and the smoothest surface touching the gripper box. You'll need to hold it there while stringing the remaining fingers. Pass the thread from the ring finger through hole 3 on the whippetree and back out though hole 4. Now thread it into the fifth hole from the thumb side on the back of the palm and down through the pinkie fingertip as you did with the other fingers. Don't tie a knot at the end yet!

Stringing the whippetree – part 2

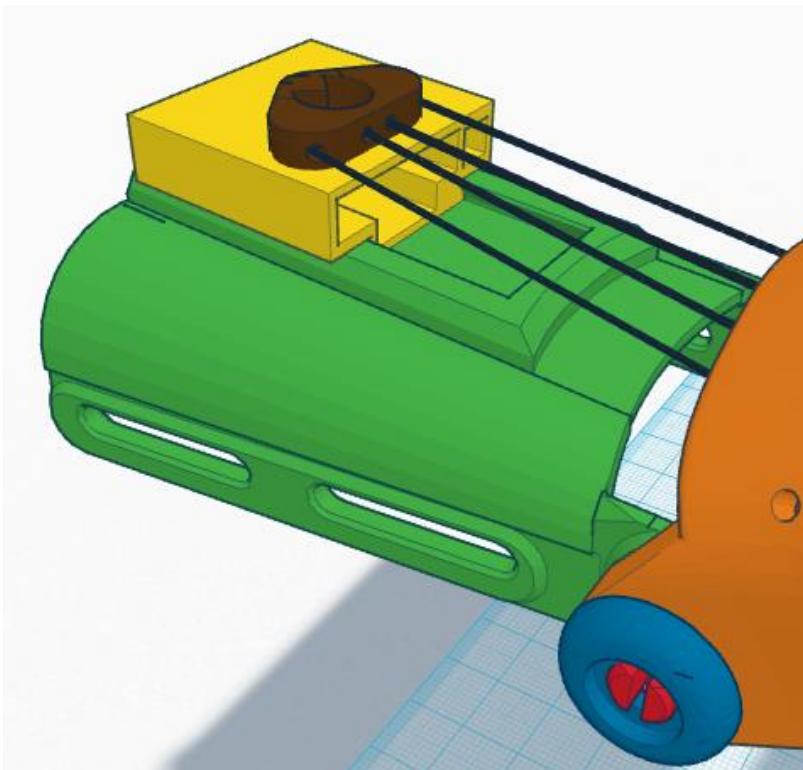


Repeat the stringing procedure but this time passing the thread from the middle finger through hole 2 in the whippetree and back out of hole 1. Then thread it through the second hole from the thumb side on the back of the palm down to the index fingertip but don't tie it to the bar on the fingertip yet!

Attaching the whippletree

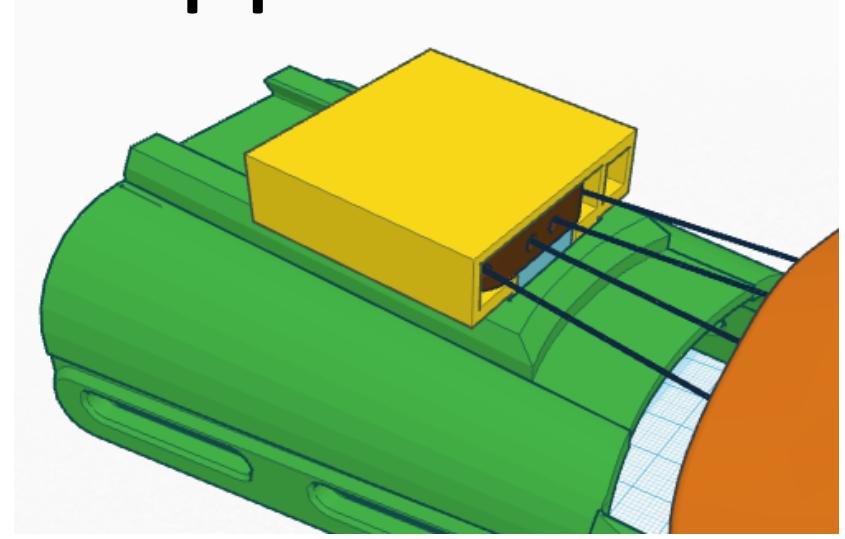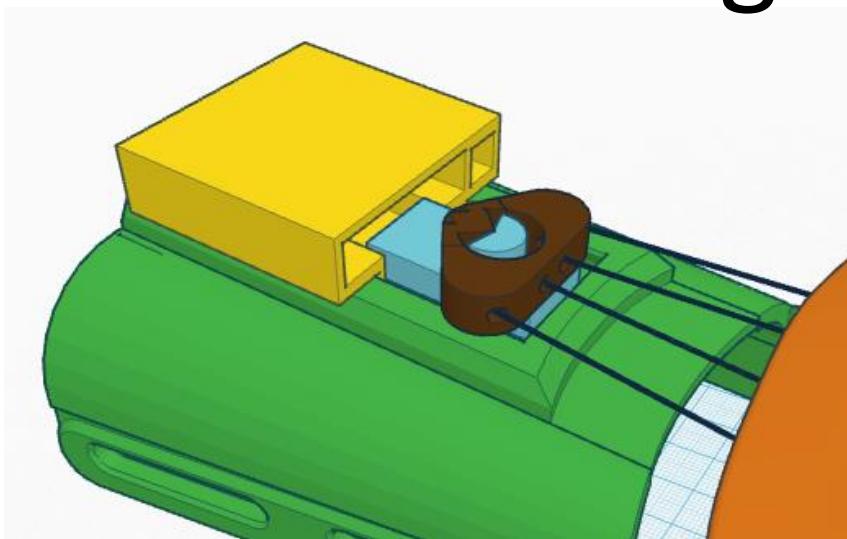

Insert the swivel pin under the whippletree in front of the gripper box. Then slide the gripper box forward as far as it can go. The whippletree will now be entirely enclosed within the gripper box.


Attaching the whippetree – part 2

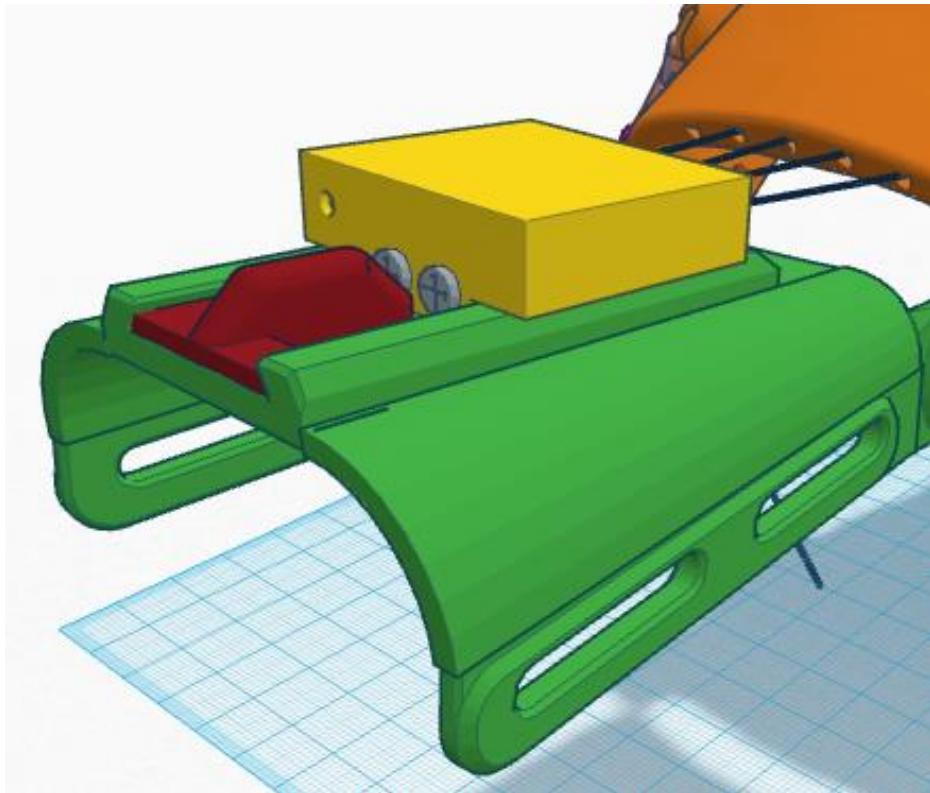

Insert and tighten two of the pan head sheet metal screws so that they attach the swivel pin. The screw heads should both be flush with the back of the gripper box but the swivel pin should still be as far forward in its slot as possible.

Slide the retention clip into the back of the dovetail slot on the top of the gauntlet.


Attach the thumb tensioner pin

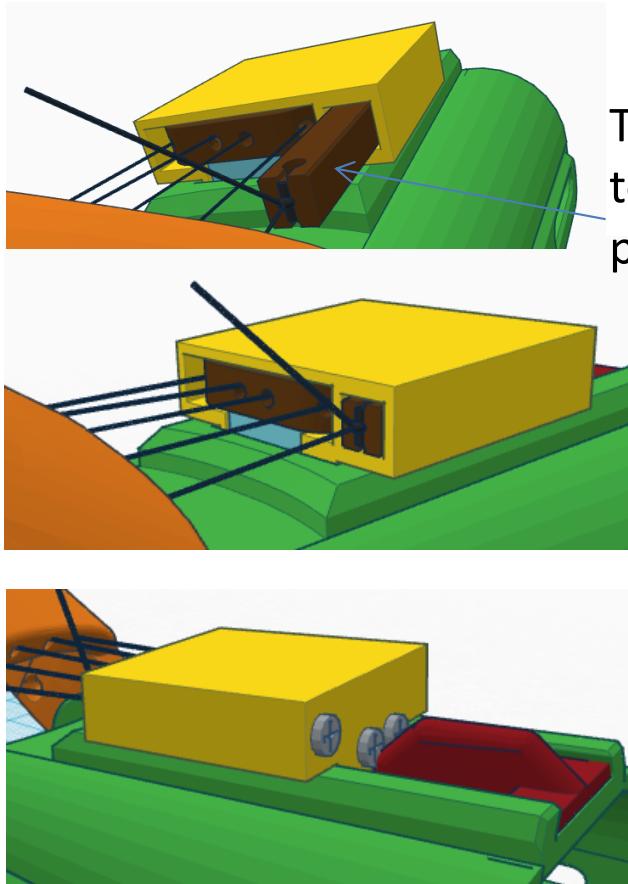


Cut a length of thread twice as long as the hand and tie it using a triple knot through the small hole at one end of the thumb tensioner pin. Pull the knot tight using two pairs of small long nose pliers. Cut the excess thread to about an inch long. Thread the long end of the thread through the remaining hole in the back of the palm and down to the end of the thumb tip as you did with the fingers. Don't tie it to the end of the thumb tip yet!

Use another sheet metal screw to attach the pin and tighten till the front of the pin is level with the front of the gripper box.


Securing the final knots

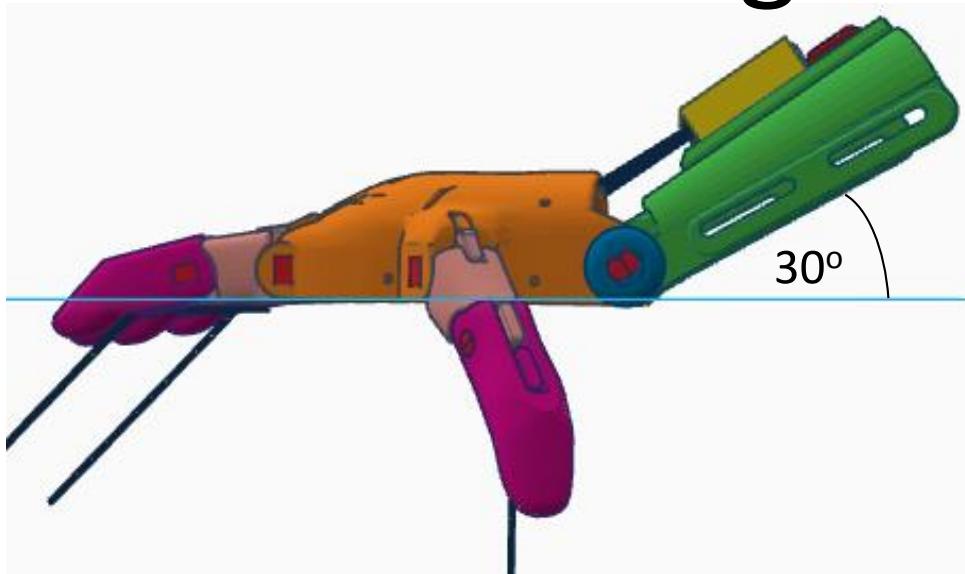

Raise the gauntlet so that it has an approximately 30° angle to the palm. Turn the hand upside down and place it at the edge of a table with the fingers overhanging.

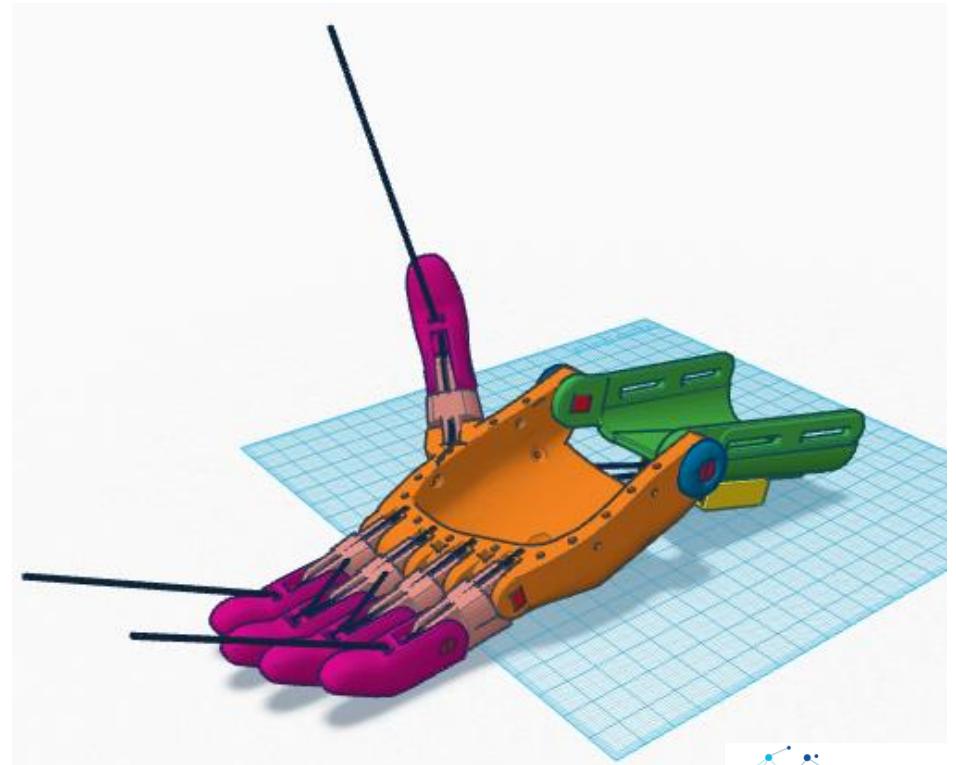

Securing the final knots – part 2

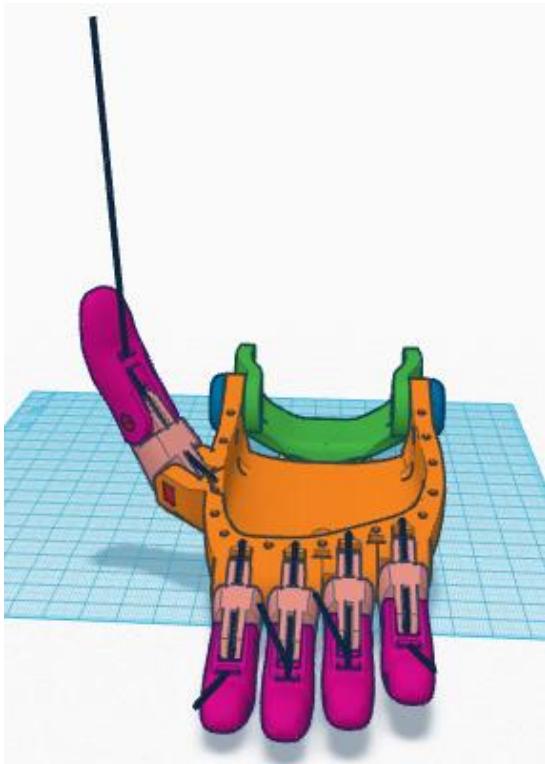

If possible, lock the hinge between the gauntlet and palm using one or two spring clamps to maintain the 30° angle. Gently pull both the pinkie and index finger threads till tight and balance them so that the front of the whippetree is in alignment with the front of the gripper box. Tie the threads around the bars on the index and pinkie fingers using one knot on each. Pull the two finger threads till the whippetree is level with the gripper box front again. Tie one more knot on the index finger and tighten using two pairs of small long nose pliers. At this point the index finger side of the whippetree should be slightly protruding from the gripper box ... if not then pull on the thread ends using pliers till it is. The thread should slide slightly within the knots.

Securing the final knots – part 3


Tie a second knot on the pinkie finger and tighten using two pairs of pliers. This time the front of the whippetree should be in alignment with the front of the gripper box. Again, pull on the thread ends using pliers if an adjustment is necessary. Now put the final knots on both the index and pinkie fingers and tighten using pliers. Perform a final check that the front of the whippetree is still in alignment with the front of the gripper box.

Now for the thumb. Pull the thumb thread tight around the bar in the thumb tip and make one knot. Pull on the end of the thread to ensure that it is tight then make two more knots. Tighten the knots on the thumb using two pairs of small long nose pliers.

Remove the spring clamps and flex the gauntlet/palm hinge to check that all the fingers and thumb are closing properly.





Attach the thermoformable palm mesh

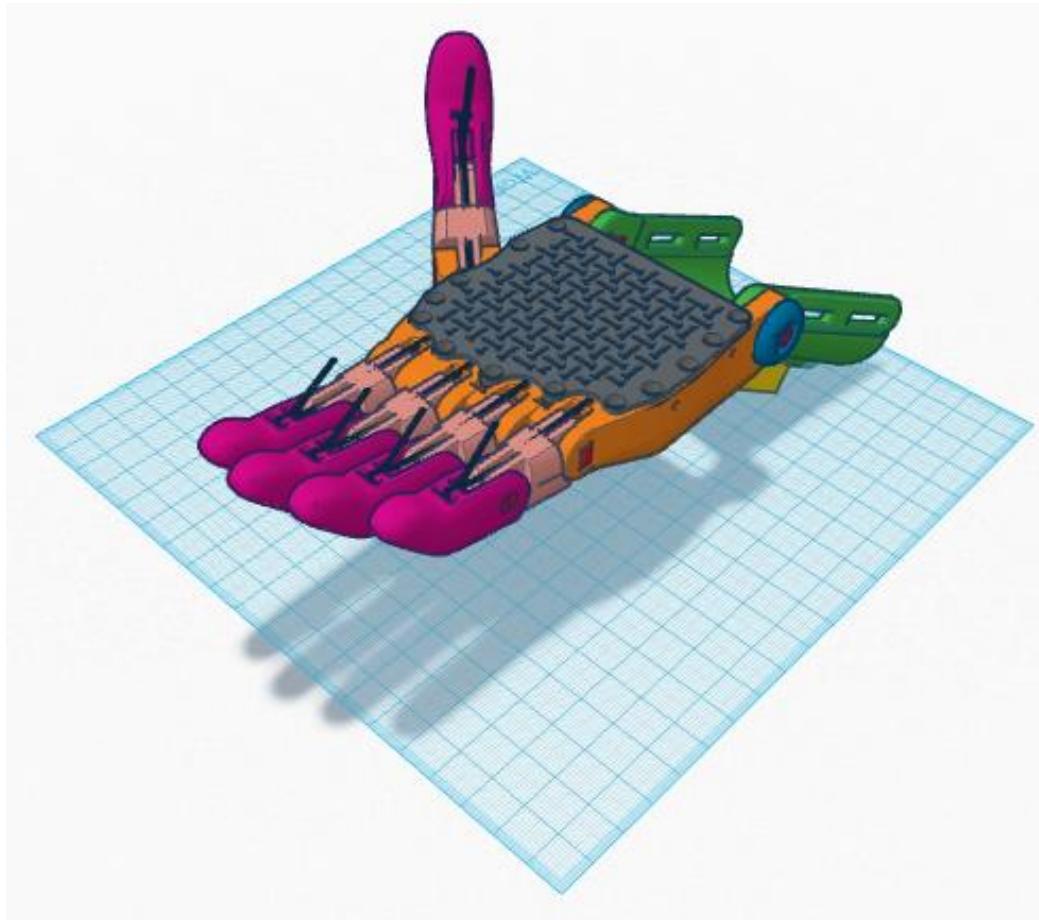

Screw the palm mesh to the palm using 13 countersunk wood screws.



Sealing the knots

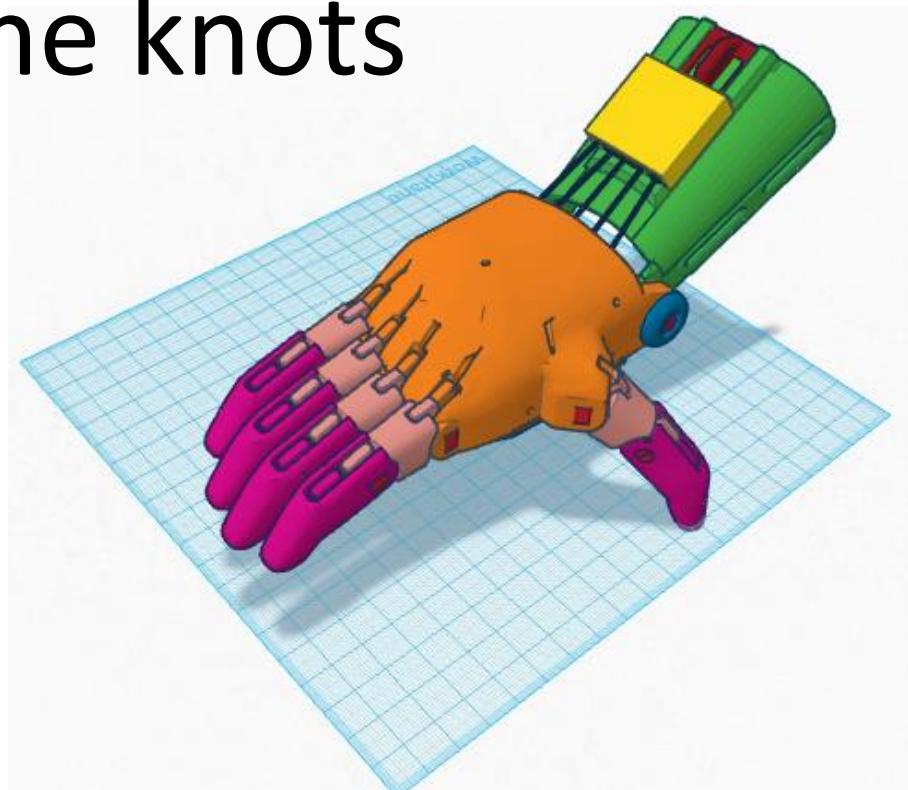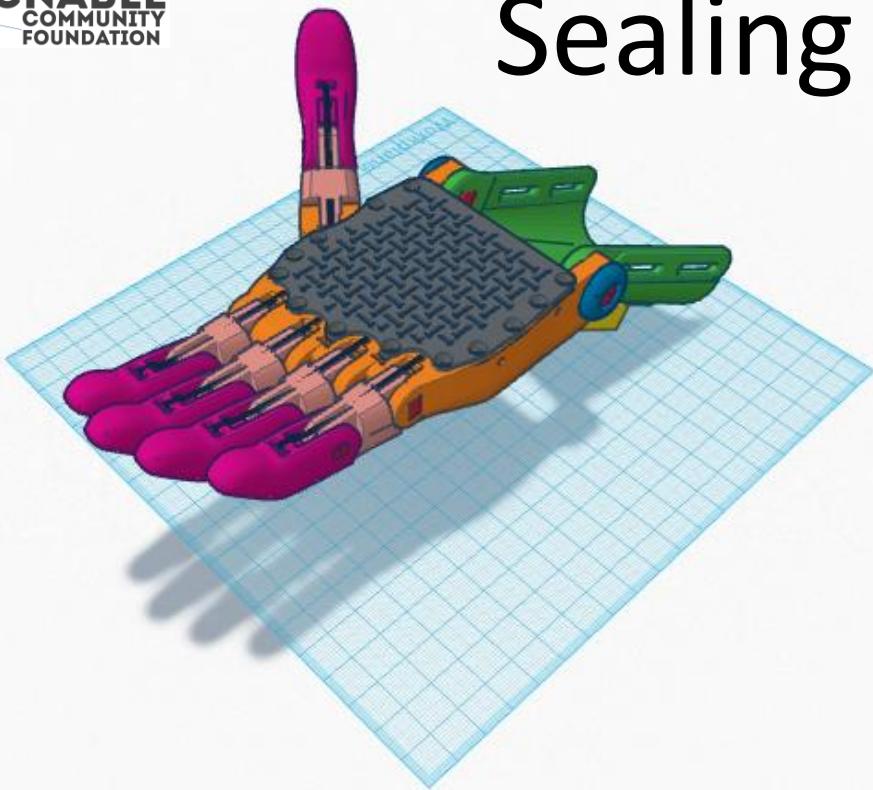

Seal the six knots including the thumb tensioner pin in the gripper box using a small drop of thick CA glue (eg. Super Glue). Wait for the glue to set hard then snip off the excess thread paying careful attention not to cut into the knots or the wrong thread.

Attaching the Velcro straps



Feed a Velcro strap through a slot on the thumb side of the gauntlet from the outside with the fuzzy side upwards



Feed the strap through the buckle



Feed the strap back through the gauntlet slot

Attaching the Velcro straps – part 2



Twist the buckle upwards and feed the strap through the gauntlet slot but not the buckle this time



Pull the strap tight then attach a second strap using the same technique to the other slot on the same side of the gauntlet



Making the fingers grip



Lee Tippi gel fingertips can be stretched over each finger and thumb tip to provide a grippy surface to pick objects up with

WARNING

Don't fit the Lee Tippi gel fingertips until the CA glue on the knots is thoroughly set as wet CA will melt the gel material

